

TO PROGRAM SET TIME:

FOR ON DELAY / INTERVAL MODE:

Press $\blacksquare + \blacktriangle / \blacktriangledown$ to program set time.

For Cyclic mode:

ON time - Press ■ + A / V to program on time

OFF time - To enter programming of off time press A + ♥ for 3sec. When in Off time programming, the LSD dp blinks
Then press ■ + A / ♥ to set off time.

To Exit programming press A + ▼ for 3sec or auto program out after 60sec if no key is pressed.

TO RESET:

For On delay / Interval mode : Press A + V for 0.6sec to reset.

For Cyclic mode: Front reset not valid.

Reset only through pulse given From rear terminals.


USER GUIDE

Typical applications of Pulse start & Gate start input:

1. ON Delay with Pulse start input:

- i. Terminal connections shall be as per fig. 1
- ii. Timing starts on momentary closure of Start
- iii. If Start switch is kept closed continuously, the timing will start at every power ON or reset.


XT543-N in ON Delay mode and Pulse start input: Fig.1 Terminal Connections

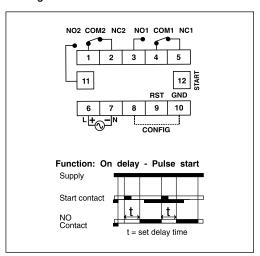


2. ON Delay with Gate start Input:

- i. Terminal connections shall be as per fig. 2.
- ii. Timing starts at power ON.
- iii. When the start switch is closed, the timing is held and it proceeds only after the start switch is released.

XT543-N in ON Delay mode and Gate start input: Fig.2 Terminal Connections

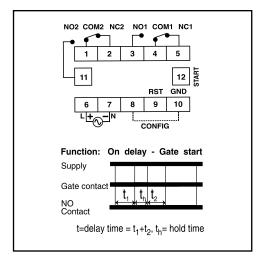

OPERATING MODES

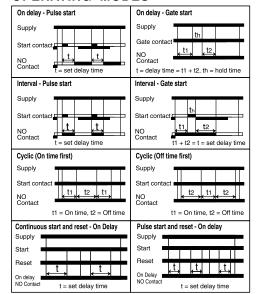

(Specifications are subject to change, since development is a continuous process.)

Selec Controls Pvt. Ltd.

Factory Address : EL-27/1, Electronic Zone, TTC Industrial Area, MIDC, Mahape, Navi Mumbai - 400 710, India.

Website: www.selec.com For Sales & Support,

Tel. No.: +91-22-41418468 / 452

Mob. No.: +91-9136977315, Email: sales@selec.com

For Service,

Tel. No.: +91-7498077172 / +91-7400069545

Email: service@selec.com