

DISPLAY (For 2 sec)	DESCRIPTION	DEFAULT VALUE	RANGE	CONDITION
	Asymmetry		ON / OFF	This option will be prompted only when NWK is 3P4W
	Phase Asymmetry Setting		5.0 - 30.0%	This option will be prompted only when AS protection is ON
	Phase sequence		ON / OFF	This option will be prompted only when NWK is 3P4W
	Phase failure		ON / OFF	This option will be prompted only when NWK is 3P4W
	MOD		ON / OFF	ON : NC (During Trip) OFF: NO (During Trip)
	Latch		ON / OFF	If Latch is ON, user has to reset the unit manually when fault is removed

Time Setting for Relay (TMR)

Press ▲ to enter sub menu from main menu

Press ▲ or ▼ to scroll through sub menu

Press ● + ▲ or ● + ▼ to change parameter value

DISPLAY (For 2 sec)	DESCRIPTION	DEFAULT VALUE	RANGE	CONDITION
	Trip time delay		0.0 - 300s	0.0 - 9.9 (step of 0.1s) 10 - 99 (step of 1s) 100 - 300 (step of 10s)
	Recovery time		0.0 - 300s	0.0 - 9.9 (step of 0.1s) 10 - 99 (step of 1s) 100 - 300 (step of 10s)
	Power ON delay		0.5 - 300s	0.5 - 9.9 (step of 0.1s) 10 - 99 (step of 1s) 100 - 300 (step of 10s)

Hysteresis (HYS)

Press ▲ to enter sub menu from main menu

Press ▲ or ▼ to scroll through sub menu

Press ● + ▲ or ● + ▼ to change parameter value

DISPLAY (For 2 sec)	DESCRIPTION	DEFAULT VALUE	RANGE	CONDITION
	Hysteresis for voltage		1.0 - 99.9V	
	Hysteresis for Asymmetry		2 - 20%	This option will be prompted only when NWK is 3P4W

Password (PW)

Press ▲ to enter sub menu from main menu

Press ▲ or ▼ to scroll through sub menu

Press ● + ▲ or ● + ▼ to change parameter value

DISPLAY (For 2 sec)	DESCRIPTION	DEFAULT VALUE	RANGE	CONDITION
	Password		ENB / DIS	Enable / Disable password protection
	Set password		0-999	Will be prompted only when Password protection is enabled

NOTE : PW will be asked when the user enter the config. menu if PW protection is enabled in the config menu and the user has to enter the password which he has set in the S.PW (set password) option.

Factory set (RST)

Press ▲ to enter sub menu from main menu

Press ▲ or ▼ to scroll through sub menu

Press ● + ▲ or ● + ▼ to change parameter value

DISPLAY (For 2 sec)	DESCRIPTION	DEFAULT VALUE	RANGE	CONDITION
	Reset (Factory set)		YES / NO	

TRIP VALUE SETTING (Online)

Press ▲ key for 3 sec. to enter or exit Trip Value Setting menu :

Press ▲ or ▼ to scroll through main menu

Press ● + ▲ or ● + ▼ to change parameter value

DISPLAY (For 1sec)	DESCRIPTION	DEFAULT VALUE	RANGE	CONDITION
	LOCK		YES / NO	This option will be prompted first when the user enters the trip setting menu. User has to set NO after which he can access the trip setting menu.
	Set over voltage for Relay		242 - 288V AC(L-N)	
	Set under voltage for Relay		127 - 219V AC(L-N)	
	Trip time delay for Relay		0.0 - 300s	
	LOCK		YES / NO, (In this option if YES is selected by the user, then whenever the user enters the Trip Value Setting, initially LOCK option will be prompted. The user will have to set NO after which he can access the trip setting menu. If the user wants to disable LOCK option, he can set NO when LOCK option is prompted after TRP option.)	

NOTE : If Values are changed, the same setting in config. menu will also changed and vice versa.

ONLINE KEYS

Individual parameters can be viewed with every press of ▼ keys.

PARAMETER	SYMBOL
* Average Voltage	L1 L2 L3
Voltage (L1-phase)	L1
Voltage (L2-phase)	L2
Voltage (L3-phase)	L3
Phase Asymmetry	As %

*** Default Page :** This page is displayed after 3 sec. from other online page.
For 3P4W system average of L-N voltages is shown.
For 1P2W system L1-N voltage is shown.

TRIP INDICATION	Trip Indication on press of ▲ key : Trip value will be displayed till the key is pressed.
RESET	Press ● key for 3sec. to reset manually (Applicable only if Latch is ON)
Master Password : 753	

In Trip value setting & configuration menu, if no key pressed for 30 sec. then unit resumes online mode.

(Specifications subject to change as development is a continuous process.)

Selec Controls Pvt. Ltd., India

Factory Address :
EL-27/1, Electronic Zone, TTC Industrial Area,
MIDC, Mahape, Navi Mumbai - 400 710, INDIA.
Tel. No. : +91-22-28476443 / 1882
Fax No. : +91-22-28471733 | Toll free : 1800 227 353
Website: www.selec.com | Email: sales@selec.com