



CONFIGURATION

- Use $\triangleright$ + Δ key to enter & exit from configuration menu, for 3 sec.
- Use Δ key to go to next parameter.
- Use $\triangleright$ key to edit the parameter & press same key for 2 sec. to save parameter.
- Use Δ key to increment parameter value.
- To set the value of CT primary in kA, First edit the value and then press Δ key for 3 sec., Display will shift to kA with resolution 000.0kA & this process is same, to set the value of CT primary in A.

Config. page.	Function	Range or Selection	Factory Setting
1	Network Selection	3Ø4W, 3Ø3W, 1Ø2W-R, 1Ø2W-Y, 1Ø2W-B	3P4W
2	CT Primary	1-999.0kA	5
3	CT Secondary	1 or 5	5


ONLINE PAGE DESCRIPTION

Press Key ($\triangleright$)	KEY PRESS	DESCRIPTION
	—	Displays 1 st phases Current
	1 st time	Displays 2 nd phases Current
	2 nd time	Displays 3 rd phases Current
	3 rd time	Displays average current of three phases.

SERIAL NUMBER DESCRIPTION

Press Δ key for 10sec. to display 8 digit serial number for 3sec. in two windows

WIRING DIAGRAM

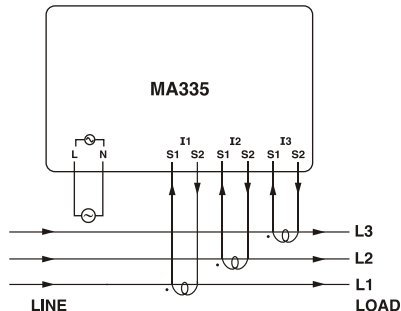

(Specifications subject to change as development is a continuous process.)

Selec Controls Pvt. Ltd., India

Factory Address :

EL-27/1, Electronic Zone, TTC Industrial Area, MIDC, Mahape,
Navi Mumbai - 400 710, INDIA.

Tel. No. : +91-22-41 418 419/430 I Fax No. : +91-22-28471733

Toll free : 1800 227 353 (BSNL/MTNL Subscribers only)

Website : www.selec.com I Email : sales@selec.com