Operating Instructions


3097-V01



36 X 72mm

SPECIFICATIONS		
Display	6 digit, 0.36" White 7 segment LED	
Supply voltage	90 to 270V AC/ DC @50/60 Hz	
Time range	Counter: 999999 counts	
Sensor Supply	12VDC@30mA (use external supply if current>30mA)	
Input	Counter: 5 to 30V DC from Proximity switches, Encoders, Potential free contacts, Limit switches etc.	
Input Speed	Slow Speed :- 20Hz High Speed :- 5 kHz	
Memory retention	10 years	
Housing	Flame retardant plastic.	
Mounting	Panel mounting.	
Temperature	Operating: 0 to 50°C Storage: -20 to 75°C	
Humidity	95% RH (non-condensing)	
Weight	85 gms	
Power consumptiom	5VA max @270V AC/DC	

MECHANICAL INSTALLATION

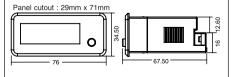

SAFETY PRECAUTIONS

Please maintain these instructions and review them prior to using the unit:


M WARNING

- 1.This unit is panel mounted type with its output terminals connecting to the host equipment. Such equipment shall also comply with basic EMI/EMC and safety requirements like IEC 61326-1 and IEC 61010 respectively.
- 2.To avoid electric shock, power supply of the unit should be kept off while wiring. Wiring should be done strictly as per the terminal layout, given in the manual.

A CAUTION

- 1. This unit is not intended for outdoor use.
- 2. The power connection cable must have a cross-section of at least 1sq.mm and insulation capacity of at least 1.5kV.
- 3. The output connections must not be loaded beyond the specified values/range.
- Avoid in flow of dust and contact of conductive material with the internal circuitry of the unit.
- 5. The unit must not operate in presence of heating sources, caustic vapors, oil, steam, vibration or impact etc.
- 6. Use clean moist cloth soaked in water for cleaning. Avoid entry of water into the circuitry through the ventilation holes.

TERMINAL CONNECTIONS

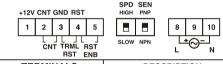


HOI END	
TERMINALS	DESCRIPTION
1	+12V
2 - 3	Count
3 - 4	Terminal Reset
4 - 5	Front Reset Enable
8	L-Live (+)
10	N-Neutral (-)

DIP SWITCH SETTING			
DIP SWITCH	OFF	ON	
DIP 1	High speed	Slow speed	
DIP 2	PNP Sensor	NPN Sensor	

RESET METHOD

By front key: Short terminals 4 & 5 to enable front panel reset. Press RST key ● momentarily

By terminals :

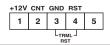


TYPICAL APPLICATION

CASE1: Operated by external contact.

- A PNP/NPN proximity sensor can be used instead of switch.(NPN/PNP can selected through DIP SW)
- 2) Connect proximity switch between terminals 1,2 & 3.
- 3) The count displayed on XC410C will be indicative count(Sensed by Sensor).

(Sensor color codes :-

Red = +12V, Green = CNT, Black = GND Brown = +12V, Black = CNT, Blue = GND)

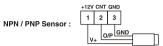

CASE2: Operated only by Potential free contact



Note 1 :- Sensor selection (PNP/NPN) is detected only at Power ON . Note 2 :- Potential free count will work only during NPN selection.

(Specifications are subject to change, since development is a continuous process)

Selec Controls Pvt. Ltd.

Tel. No.: +91-22-40394200 / 40394202

Fax No.: +91-22-28471733 | Toll free: 1800 227 353 | Website: www.selec.com | Email: sales@selec.com