
Terminal Connections

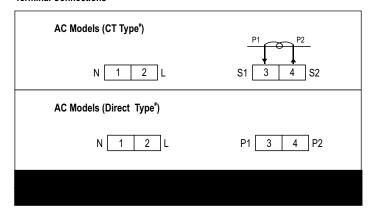

*NOTE

- 1) CT Type: There is an internal CT with CT setting. Above 5A(0-5A model) external CT is required.
- 2) Direct Type: Input is directly connected to the input of the unit.

Ordering Information



Note:

- 1) CT Type: There is an internal CT with CT setting (5-4000A). For current input >5A, external CT is required.
- 2) Direct Type: Input is directly connected to the unit.