

# FEATURES

- > Flexible card selection
- > Compact PLC with user selectable HMI.
- Windows based user friendly Selpro software for ladder programming & HMI configuration
- > RS 485 based communication with Slave.

### Patents applied worldwide

| SPECIFICATIONS              |  |                 |  |   |          |  |
|-----------------------------|--|-----------------|--|---|----------|--|
| Supply Voltage              |  | 24VDC(18-30VDC) |  |   |          |  |
| Sensor S                    | Sensor Supply(SS)                            |                 | NA   |   |          |  |
| IO Card S                   | IO Card Slots                                |                 |  | 2 (max)   |          |  |
| RTC                         | RTC  |                 |  | Yes(Optional)                                     |          |  |
| DIGITAL INPU                | DIGITAL INPUT (Max. counting frequency 50Hz) |                 |  |   |          |  |
| Input Typ                   | Input Type                                   |                 | PNP  |   |          |  |
| Input Vol                   | Input Voltage Range (V+)                     |                 | 5-30V DC   |   |          |  |
| No. of Di                   | No. of Digital Input                         |                 |  | 7 (Including 1 input (0-10Vdc) & 1 Fast input CH) |          |  |
| Response                    | Response Time                                |                 | 10ms max   |   |          |  |
| Isolation                   | Isolation                                    |                 |  | NO  |          |  |
| FAST COUNTE                 | FAST COUNTER INPUT (On Fixed card)           |                 |  |   |          |  |
| Input Ty                    | Input Type                                   |                 |  | PNP   |          |  |
| No. of Di                   | No. of Digital Input                         |                 |  | 2 (uni) / 1(Bi / Quad) / 4 Standard Digital Input |          |  |
| Operating Modes / Frequency |  |                 | Unidirectional / Bidirectional / Quadrature<br>Modes / Dual Uni ( 5kHz for all ) |   |          |  |
| СН                          | DI   |                 | MODE   |   |          |  |
| СП                          |  | UNI             | ВІ   | QUAD  | DUAL UNI |  |
| CH0                         | 10   | RT              | RT   | 1 <sup>st</sup> IP *                              | RT       |  |
|                             | l1   | STD IP          | Direction  | 2 <sup>nd</sup> IP*                               | Т        |  |

\* 90° Phase shift signals; RT - Rate Totalizer; T - Totalizer; STD IP - Standard Input

| DIGITAL OUTPUT - RELAY          |   |  |
|---------------------------------|---|--|
| Contact Rating                  | NO Type : (5A resistive @ 230V AC / 30V DC) |  |
| Isolation                       | 2.5 kV                                      |  |
| Initial Max. Contact Resistance | 100mΩ (@1A, 6V DC)                          |  |
| Switching Time                  | 20ms max.                                   |  |


Note: Refer I/O cards and Display cards for further mentioned I/O specifications.

| DIGITAL OUTPUT - TRANSISTOR |   |  |                                   |  |
|-----------------------------|---|--|-----------------------------------|--|
| Transistor Rating           | Fransistor Rating PNP Type : 24V,100 mA |  |                                   |  |
| Switching Time 10ms max.    |   |  |                                   |  |
| ANALOG INPUT                |   |  |                                   |  |
| Sensors                     |   | J, K, T, R, S, C, E, B, N, L, U, W, PLTNL II, RTD,<br>MVOLT(0-60mV), VOLT (0-10V), CURR (0-20mA) |                                   |  |
|                             | 12 bits                                 | 0 - 10V  | 2.5mV (1Count)                    |  |
| Resolution                  |   | 0 - 20mA   | 5μΑ                               |  |
|                             |   | TC / RTD   | 0.1°C (Note : 1°C for R & S type) |  |
| Conversion Time             | 100 msec                                | 100 msec.  |                                   |  |
| Accuracy at 25°C            | 0.25% of full scale                     |  |                                   |  |


| Analog Input (on power supply card only) |  |  |  |
|--|--|--|--|
| Input Type                               | 1 Current(0-20mA)  |  |  |
| ANALOG OUTPUT                            |  |  |  |
| Output Type                              | Current - 0-20 mA; Voltage - 0-10 V                          |  |  |
| Resolution                               | 14 bits  |  |  |
| Conversion Time                          | 10 msec.   |  |  |
| Linearity Error                          | 0.1%   |  |  |
| COMMUNICATION                            |  |  |  |
| Communication Port - Port 1              | 1:RS485 Slave  |  |  |
| Communication Protocol                   | MODBUS RTU,<br>Proprietary Protocol for IO630 expansion port |  |  |
|  |  |  |  |

| ENVIRONMENTAL CONDITIONS  |  |  |
|---------------------------|--|--|
| Temperature               | Operating: 0 to 55°C; Storage: -20 to 70°C |  |
| Humidity (non-condensing) | 10% to 95% RH                              |  |
| Enclosure                 | Panel Mounting                             |  |
| Weight                    | 305 gms (Without I/O cards)                |  |

# **INSTALLATION PROCEDURE**

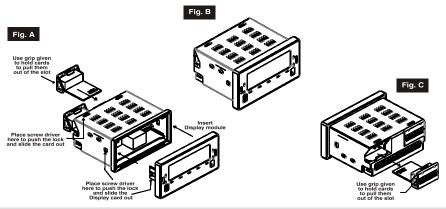

- 1. Insert the display module & I/O card as shown in Fig. A.
- 2. To remove display module, use screw driver to push the lock on both the sides of module and pull it out, refer Fig. A.
- 3. Fig. B shows fully assembled MIBRX-48 unit shown as reference.
- 4. To remove card from slot, use screw driver to push the lock and slide the card out as shown in Fig. C.

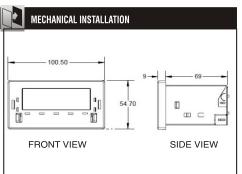

# **A** CAUTION

The equipment in its installed state must not come in close proximity to any heating sources, caustic vapors, oils, steam, or other unwanted process by products.

#### **EMC Guidelines:**

- 1. Use proper input power cables with shortest connections and twisted type.
- Layout of connecting cables shall be away from any internal EMI source.

#### MAINTENANCE

- 1. To avoid blockage of ventilation holes, clean the equipment regularly using a soft cloth.
- Do not use Isopropyl alcohol or any other organic Solvents for cleaning.

#### INSTALLATION INSTRUCTIONS

#### **▲** CAUTION

- 1. This equipment, being built-in-type, normally becomes a part of the main control panel and the terminals do not remain accessible to the user after installation.
- 2. Conductors must not come in contact with the internal circuitry of the equipment else it may lead to a safety hazard that may endanger life or cause electrical shock to the operator.
- 3. Circuit breaker or mains switch must be installed between the power source and supply terminals to facilitate power 'ON' or 'OFF' function.
- 4. The equipment shall not be installed in environmental conditions other than those specified in this manual.
- 5. Since this equipment forms part of the main control panel, its output terminals get connected to the host equipment. Such equipment shall also comply to EMI / EMC and safety requirements like CE standard procedure.
- 7. Thermal dissipation of equipment is met through ventilation holes provided on housing of equipment. Obstruction of these ventilation holes may lead to a safety hazard.
- 8. The output terminals shall be loaded strictly as per the values / range specified by the manufacturer.

#### **ELECTRICAL PRECAUTIONS DURING USE**

Electrical noise generated by switching of inductive loads can create momentary disruption, erratic display, latch up, data loss or permanent damage to the instrument.


#### To reduce noise:

Use of MOV / Snubber circuit across load / contactors of the unit are recommended.

- 1. MOV Part no.: AP-MOV-03
- 2. Snubber Part no.: APRC-01

NOTE: Below mentioned diagram is applicable only for 230V relay outputs.

#### **Typical Connections For Loads:**

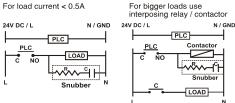

NOTE: Use snubber as shown above to increase life of internal relay. Use separate shielded wires for inputs.


# **■ SAFETY PRECAUTIONS**


This manual is meant for personnel involved in wiring installation, operation and routine maintenance of the equipment.

All safety related conditions, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure operator and instrument safety. Any misuse may impair the protection provided by the equipment.



Read complete instructions prior to installation and operation of the unit.

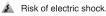

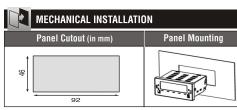

For installing the controller

- 1. Before you begin, note that the mounting panel cannot be thicker than 5 mm (0.197").
- 2. Make a panel cut-out measuring 92mm x 46mm.
- 3. Slide the controller into the cut-out, ensuring that the rubber seal is in place.
- 4. Fix the unit into the cutout. Push the 2 mounting brackets into their slots on the sides of the controller
- 5. Tighten the sliding bracket against the panel. Hold the bracket securely against the unit while tightening the slide clamps.

#### WIRING INSTRUCTIONS

#### CAUTION

- 1. To prevent risk of electric shock, power supply to the equipment must be kept OFF while wiring.
- 2. Terminals and electrically charged parts must not be touched when the power is ON.
- 3. Wiring shall be done strictly according to the terminal layout provided in the operating manual.
- 4. To eliminate electromagnetic interference use short wire with adequate ratings and twists of equal size.
- 5. The power supply connection cable must have a cross section of 1sq.mm or greater and insulation capacity of at least 1.5KV.

#### **FUNCTIONAL DETAILS**

MIBRX is a PLC with user selectable HMI. The user can configure the product, it's I/O slots and display type using SELPRO software.

#### SELPRO has two sections:

- 1. Ladder logic programming section
- 2. Selec Machine Interface, used for configuration

This software is provided with the product. For details of the software and configuration method, please refer to its user manual with the product.

Note: Ensure card inserted in any slot is the same one selected.

# ORDERING INFORMATION

ORDER CODE DESCRIPTION MIBRX-48-0-0-24VDC

#### AC-USB-RS485-02 (USB to 2 pin Open Wire) 24V PS & LOGIC AC-USB-RS485-03 (USB to 6 pin RJ25 jack)

**ACCESSORIES** 

Accessories for Communication

AC-IOEXP-03 (Port Expansion Adapter)

# Window-Based Software for Ladder Programming ACD-005 Power Supply: 1) RP-2M-1.1A-24VDC 2) RP-3M-2.5A-24VDC

3) RP-3M-5A-24VDC


# SUPPORTED IO CARDS

| SUPPORTED IO CARDS |                      |                                       |  |
|--------------------|----------------------|---------------------------------------|--|
|                    | MIBRX-SC-DI04        | 4 Digital Input                       |  |
|                    | MIBRX-SC-DI06        | 6 Digital Input                       |  |
|                    | MIBRX-SC-RO03        | 3 Relay Output                        |  |
|                    | MIBRX-SC-RO04        | 4 Relay Output                        |  |
|                    | MIBRX-SC-TO04        | 4 Transistor Output                   |  |
|                    | MIBRX-SC-DI02-RO02   | 2 Digital Input & 2 Relay Output      |  |
|                    | MIBRX-SC-DI02-TO02   | 2 Digital Input & 2 Transistor Output |  |
|                    | MIBRX-SC-AI02-V      | 2 Analog Input (Voltage)              |  |
|                    | MIBRX-SC-Al02-I      | 2 Analog Input (Current)              |  |
|                    | MIBRX-SC-AI01-V-I    | 1 Analog intput(Voltage & Current)    |  |
|                    | MIBRX-SC-AO01V/I     | 1 Analog Output(Voltage/Current)      |  |
|                    | MIBRX-SC-AI02-RTD    | 2 Analog input RTD (PT100)            |  |
|                    | MIBRX-SC-Al02-PT1000 | 2 Analog input PT1000                 |  |
|                    | MIBRX-SC-AI02-TC     | 2 Analog input TC                     |  |
|                    | MIBRX-SC-AI02-NTC    | 2 Analog Inputs (NTC)                 |  |
|                    | MIBRX-SC-LC02        | 2 Load cell                           |  |
|                    |                      |                                       |  |

## SUPPORTED DISPLAY CARDS

MIBRX-DSP-48-7-2-14-B

### **TERMINAL CONNECTION**

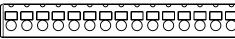

#### SERVICE DETAILS

This device contains no user serviceable parts and requires special equipment and specialized engineers for repair.

Please contact service center for repair on the following numbers :

Tel. No.: + 91-7498077172; Email: service@selec.com

NO WARRANTY ON UNIT DAMAGED DUE TO WRONG POWER SUPPLY.

( Specifications are subject to change, since development is a continuous process )

#### Selec Controls Pvt. Ltd.

Factory Address

EL-27/1, Electronic Zone, TTC Industrial Area, MIDC, Mahape, Navi Mumbai - 400 710, INDIA

Tel. No. : +91-22-41 418 419/430 | Fax No. : +91-22-28471733 | Toll free: 1800 227 353 (BSNL/MTNL Subscribers only) Website: www.selec.com | Email: sales@selec.com

| Doc. Name : OP INST MIBRX-48-X-X-24VDC | OP1010-V01 (Page 2 of 2)|