selec **MV334**

Operating Instructions

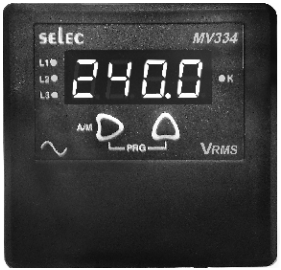

96 x 96mm

SPECIFICATIONS

Display : 4 Digit 7 segment LED Display
Wiring input : 3 Ø 4 W, 3 Ø 3 W, 1 Ø 2 W
Rated input voltage : 11 - 300V AC(L-N)
19 - 516V AC(L-L)
Frequency range : 50/60 Hz
Max continuous I/P range : 120% of rated I/P Voltage
Over range indication : "Or" for input > 516V(L-L)
"Or" for input > 300V(L-N)
Impedance : 1MΩ (±5%)
PT Primary : 100V - 999kV
PT Secondary : 100V - 500V
(Programmable to any value)
Resolution : Auto resolution
Accuracy : ±0.5% of full Range

Measuring Method : True RMS
Display Update Time : 1sec.
Power Consumption : Less than 5VA
Auxiliary Supply Voltage : 230V AC(±20%), 50/60Hz
Weight : 190gms
Mounting : Panel mounting
Environmental Conditions :
Operating Temperature : 0°C to 50°C
Operating Storage : -25°C to 70°C
Relative Humidity : 0-90% (non-condensing)
Pollution degree : II

SAFETY PRECAUTIONS

All safety related codifications, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.

If the equipment is not used in a manner specified by the manufacturer it might impair the protection provided by the equipment.

- Do not use the equipment if there is any mechanical damage.
- Ensure that the equipment is supplied with correct voltage.

⚠ CAUTION :

1. Read complete instructions prior to installation and operation of the unit.
2. Risk of electric shock.
3. The equipment in its installed state must not come in close proximity to any heating sources, caustic vapors, oils, steam or other unwanted process by products.

CONFIGURATION

- Use ⋗ + ⩓ key to enter & exit from config. menu, for 5 sec.
- Use ⩓ key to go to next parameter.
- Use ⋗ key to edit the parameter & press same key for 2 sec. to save parameter.
- Use ⩓ key to increment parameter value.
- To set the value of PT primary in kV, First edit the value and then press ⩓ key for 3 sec., Display will shift to kV with resolution 000.0kV & this process is same, to set the value of PT primary in V.

Config. page.	Function	Range or Selection	Factory Setting
1	Network Selection	3Ø4W, 3Ø3W, 1Ø2W-R, 1Ø2W-Y, 1Ø2W-B	3P4W
2	PT Primary	100-999kV	350
3	PT Secondary	100-500V	350

ONLINE PAGE DESCRIPTION

	KEY PRESS	DESCRIPTION
Press Key (⩓)	* ——	Displays 1st phase voltage
	* 1st time	Displays 2nd phase voltage
	* 2nd time	Displays 3rd phase voltage
	* 3rd time	Displays average line neutral voltage
	4th time	Displays line-line voltage of 1st & 2nd Phase
	5th time	Displays line-line voltage of 2nd & 3rd Phase
	6th time	Displays line-line voltage of 3rd & 1st Phase
	7th time	Displays average line-line voltage

Note : * Marked pages are not available when network selection is 3P3W. and 1P2W respective phase parameter will be available.

AUTO MANUAL DESCRIPTION

Press ⋗ key for 3sec. to switch in auto and manual mode.

SERIAL NUMBER DESCRIPTION

Press ⩓ key for 10sec. to display 8 digit serial number only for 10sec. in two windows.

WIRING DIAGRAM WITH TERMINAL CONNECTIONS

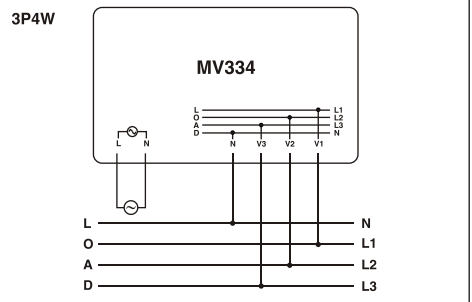

(Specifications subject to change as development is a continuous process.)

Selec Controls Pvt. Ltd., India

Factory Address :
EL-27/1, Electronic Zone, TTC Industrial Area, MIDC, Mahape, Navi Mumbai - 400 710, INDIA.
Tel. No. : +91-22-4148 419/430 I Fax No. : +91-22-28471733
Toll free : 1800 227 353 (BSNL/MTNL Subscribers only)
Website : www.selec.com I Email : sales@selec.com