RESET METHOD

NOTE : Press ▲ (RST) key continuously for 3sec. to enter into function.

Reset



The unit will auto exit reset mode after 1sec.

TO PROGRAM SET VALUE

: Press key continuous for 3 sec to change the set value.The corresponding digit will increment or decrement from **0** to **9** using & respectively.

Only if mode selected is on delay / Interval

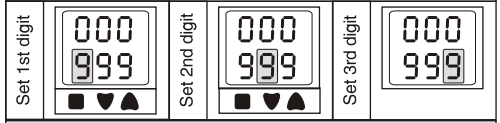

NOTE : Press ■ key to store set value & Press key continuous for 3 sec to exit the set value function .

Only if mode selected is cyclic

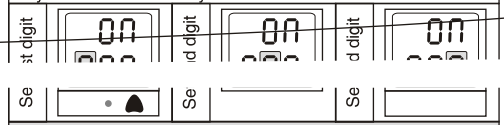

NOTE : Press ■ key continuous for 3 sec to register and move to next parameter

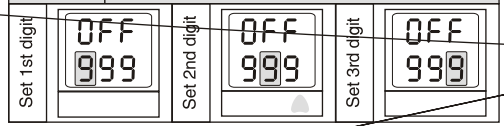

NOTE : If the set value is 000 then timer must hold (not work). All indications will be OFF.

The unit will auto exit set value mode after 30sec. of key inactivity
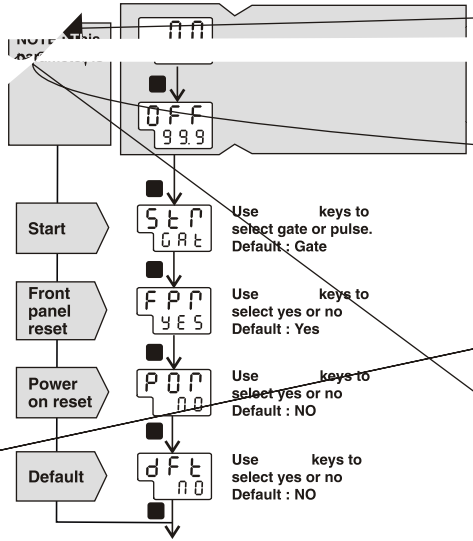
to scroll
arious modes.
Delay