



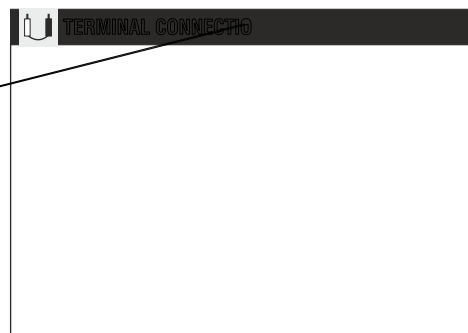


## SETTING THE TS2M1-1-16A-230V/TS1W1-1-20A-230V PARAMETER

Note: To change parameters value use "▷ / ◁ / ▽" : To set value use "ENT" : To come out of programming use "ESC" (NOTE 1, 3 & 5)

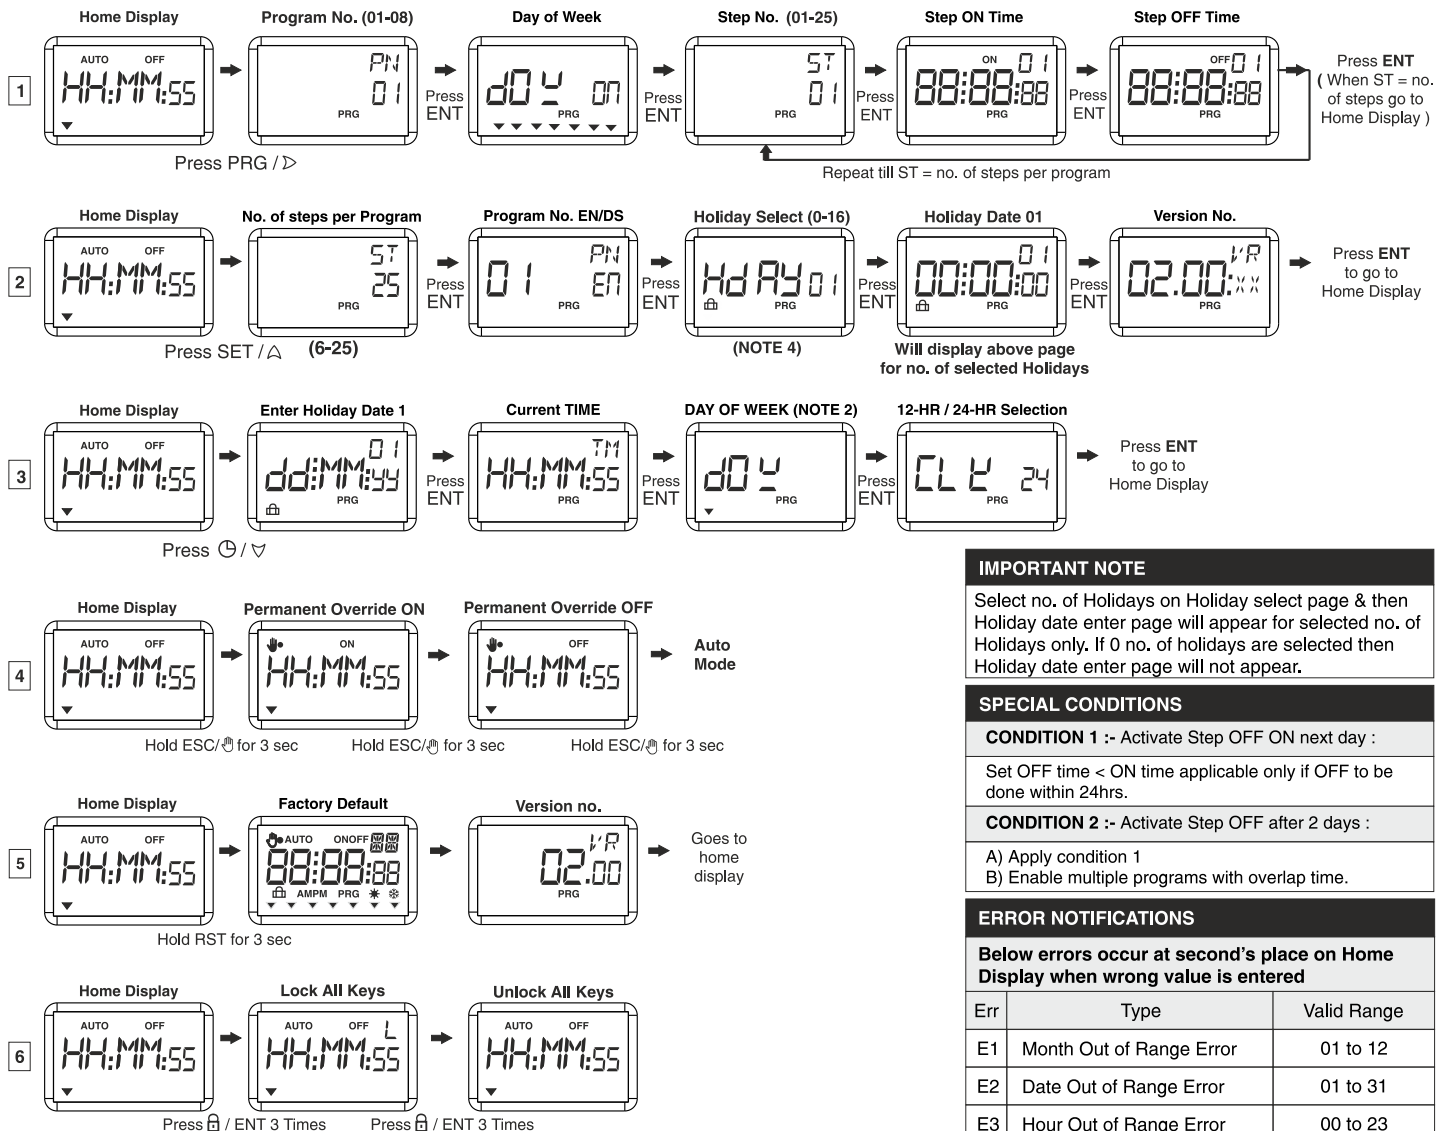

### FRONT PANEL VIEW

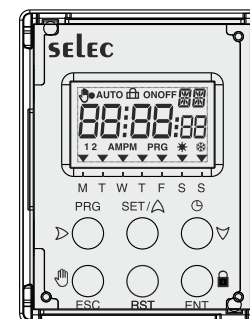

### KEY OPERATIONS

| To Enter Programming                                                                                 | Press key                                                                                 |
|------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|
| Set Control programs and Steps                                                                       | PRG / ▷                                                                                   |
| Set Clock – Current Date & Time                                                                      | ◁ / ▽                                                                                     |
| Set System Settings                                                                                  | SET / ◁                                                                                   |
| Factory Default                                                                                      | RST                                                                                       |
| To Exit programming                                                                                  |                                                                                           |
| Run Mode                                                                                             | Press & hold key for 3 secs                                                               |
| Mode Select- switch mode between<br>a) Auto<br>b) Permanent Override ON<br>c) Permanent Override OFF | ⏏ / ESC                                                                                   |
| To Modify Parameter in Programming (PRG) Mode                                                        | Press key                                                                                 |
| NOTE 1 : To modify parametric values.                                                                | ◁ / ▷ / ◁ / ▽                                                                             |
| NOTE 2 : To Modify Day of Week.                                                                      | ◁ / ▷ - Select Day of Week.<br>◁ / ▽ - Toggle On / Off.                                   |
| NOTE 3 : To confirm selection / programming.                                                         | ENT Key                                                                                   |
| NOTE 4 : To select Holiday dates                                                                     | ◁ / ▽ - Select no. of holidays<br>Press ENT to go to Holiday date select (Note 1 to edit) |
| NOTE 5 : Program Out                                                                                 | ESC Key or automatic 60sec program out on key inactivity.                                 |

### IMPORTANT NOTE

Select no. of Holidays on Holiday select page & then Holiday date enter page will appear for selected no. of Holidays only. If 0 no. of holidays are selected then Holiday date enter page will not appear.

### SPECIAL CONDITIONS

**CONDITION 1** :- Activate Step OFF ON next day :

Set OFF time < ON time applicable only if OFF to be done within 24hrs.

**CONDITION 2** :- Activate Step OFF after 2 days :

- A) Apply condition 1  
B) Enable multiple programs with overlap time.

### ERROR NOTIFICATIONS

Below errors occur at second's place on Home Display when wrong value is entered

| Err | Type                         | Valid Range |
|-----|------------------------------|-------------|
| E1  | Month Out of Range Error     | 01 to 12    |
| E2  | Date Out of Range Error      | 01 to 31    |
| E3  | Hour Out of Range Error      | 00 to 23    |
| E4  | Step Hour Out of Range Error | 00 to 23    |

(Specifications are subject to change, since development is a continuous process.)

### Selec Controls Pvt. Ltd., India

Factory Address : EL-27/1, Electronic Zone, TTC Industrial Area, MIDC, Mahape, Navi Mumbai - 400 710, INDIA.

Tel. No. : +91-22-41 418 468/452 | Fax No. : +91-22-28471733 | Toll free: 1800 227 353 (BSNL/MTNL Subscribers only)

Website : www.selec.com | Email : sales@selec.com